

Perazzi TM Ejectors

The Perazzi TM Series guns went through a few design changes; one in particular was the ejector. The picture below shows the difference in the two types of TM ejectors. The main difference is in the slot position on the left side of ejector. Compare yours to the picture below to determine which ejector you need to order.

To remove the ejector from your gun, remove the barrel and place the barrel upside down gently in a vise. On the side of the monoblock, you will notice a hole about 4mm in diameter. Inside that hole you will see a tiny hole in the ejector body. Straighten a small paperclip and press the straight end in the small hole and you will feel some spring resistance. What we will do next is compress the ejector lock pin (with the paperclip) and shear the paperclip allowing the ejector to come free. Press on the paperclip until it bottoms out (use easy pressure) and tap the front lip of the ejector rearward with a brass hammer. The paperclip should shear and the ejector should slide out toward the chamber end of the barrel. REMOVE THE SHEARED PART OF THE PAPERCLIP FROM THE EJECTOR.

Some fitting of the new ejector will be required to insure proper fit. We recommend a gunsmith perform the fitting as a chamber and shell rim cutting tool is required.

